



 
Ford bronco raptor

Ride On

Official Licensed Product

INSTALLATION AND OPERATING INSTRUCTIONS

Children's electric cars

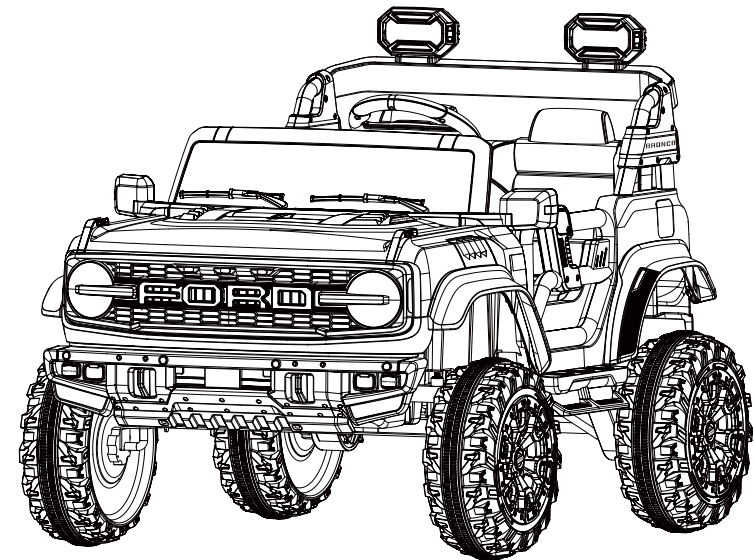

Executive standard:
En71 and En62115
ASTM F963



**Official
Licensed
Product**

© 2024 Ford Motor Company.  are trademark(s) of Ford or its affiliates used under license.
Manufactured and distributed by Chu Zhou Bettyma Baby Carrier Co., Ltd. under license.
The [FORD] trademark and related trademarks and designs are used with the permission of Ford Motor Company.



WARNING:

Assembled by an adult.
This toy is unsuitable for children under 3 years due to its maximum speed.

Photos are for reference ONLY.

FP-LD


INSTALLATION INSTRUCTION

The illustrations in this instruction are used for easier understanding of the operation method of the product and the product structure. Please note there may be differences between the pictures and the physical item.

In order to improve the quality, we may change part of the structure and appearance of the product without an advance notice.

! Please read the instructions carefully before use, it will tell you the right operation method and installation steps. Incorrect operation may damage the product, or even hurt your child. Please keep this instruction ready and easy to find.

 Preparation before installation: Power-on

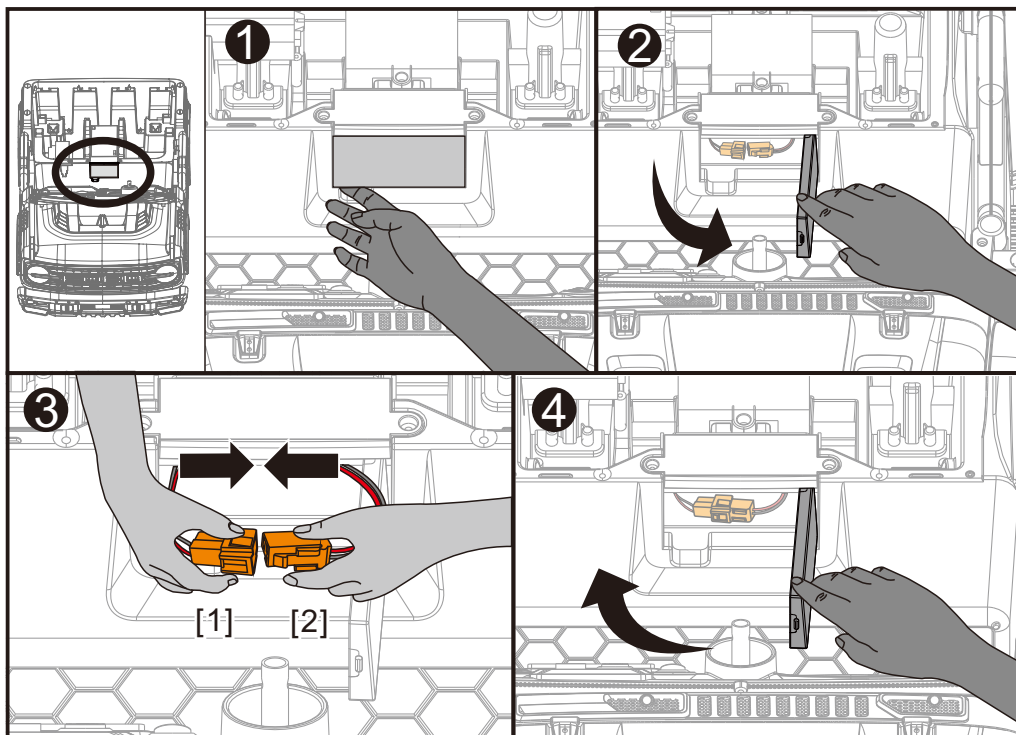

1&2: Please find and open the Charging hole cover as shown in figure.

3. Connect the terminal [1] and [2].

4. Close the Charging hole cover.

① Safety

⚠ WARNING!

The owner's manual contains assembly, use and maintenance instructions. The vehicle must be assembled by an adult who has read and understands the instructions in this manual. Keep the packaging away from children and dispose of all packaging before use.

Note: For best performance use on flat, hard surfaces.

The following safety hazards may result in serious injury or death to the user of the vehicle:

- This product contains small parts that are for adult assembly only.
Keep small children away when assembling. Remove and dispose of all protective material and poly bags before assembly. Be sure to remove all packaging materials and parts from underneath the vehicle body.
- Battery posts, terminals and related accessories contain lead and lead compounds chemicals known to cause cancer, reproductive harm, and are toxic and corrosive. Never open the battery.
- Body parts such as hands, legs, hair and clothing can get caught in moving parts. Never place a body part near a moving part or wear loose clothing while using the vehicle. Always wear shoes when using the vehicle.
- This toy does not have brakes or any braking capability. Do not leave a child unattended while using this toy or allow use of this toy in any location that requires braking capability, as this could result in a roll away or loss of control, which may cause serious injury or death.
- Using the vehicle near streets, motor vehicles, drop-offs such as: steps, water (swimming pools) or other bodies of water, sloped surfaces, hills, wet areas, flammable vapors, in alleys, at night or in the dark could result in an unexpected accident. Always use the vehicle in a safe, secure environment with continuous adult supervision.
- Using the vehicle in unsafe conditions such as snow, rain, loose dirt, mud, sand or fine gravel may result in unexpected action such as tip over and skidding, and damage to the electrical system and battery.
- Do not use the vehicle in an unsafe manner. Unsafe manner include but are not limited to:
 - a. Pulling the vehicle with another vehicle or similar device
 - b. Allowing more than two riders
 - c. Pushing the user from the back
 - d. Traveling at an unsafe speed

Always use common sense and safe practices when using the vehicle

To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than 2 riders.

BATTERY WARNINGS

⚠ WARNING!

1. Do not put the battery into a fire, or heat the battery.
2. Do not store the battery in high temperature environment
3. Do not connect the battery reversed in positive (+) and negative (-) terminals in the charger or equipment.
4. Do not let the battery terminals (+ and -) contact a wire or any metal (like a metal necklace or a hairpin) with which it carried or stored together, may cause short-circuit.
5. Do not drive a nail in, hit with a hammer, or stamp on the battery, do not strike the battery in any ways.
6. Do not disassemble or alter the batteries' outside structure.
7. Do not submerge the battery in water, do not wet the battery when store the battery.

NOTICE

1. Battery should be charged and discharged with proper charger, in compliance with correct operation Contents.
2. Do not use the battery with other maker's batteries, different types and /or models of batteries such as dry batteries, nickel-metal hydride batteries, or nickel-cadmium batteries, or new and old lithium batteries together.
3. Do not leave the battery in a charger or equipment if it generates an older and/or heat, changes color and/or shape, leaks electrolyte, or cause any other abnormality.
4. Do not discharge the battery continuously when it is not charged.

CAUTION

1. Before using the battery, carefully read and follow battery specification and the information on the surface of the batteries.
2. Children should not be allowed to play with them
3. The batteries should only be charged with a matching charger.
4. Caution – The battery used in this device may present a risk of fire or chemical burn if mistreated. Do no disassemble, heat above (manufacturer’s maximum temperature limit), or incinerate. Replace battery with (battery manufacturer’s name or end product manufacturer’s name and part number) only. Use of another battery may present a risk of fire or explosion.
5. When the batteries are not be used for a long time, please store them safely. The batteries shall be charged every three months so that they will stay in a half-charged state. Please wrap the batteries with non-conductive materials in order that metallic materials will not contact the batteries directly, which may result in damage to the batteries. Keep the batteries in a cool and dry place.

USER REQUIREMENTS AND WARNINGS

Age	3 years+
Max Weight	(60kgs)

Before using the vehicle the child should understand the vehicle controls and safety issues. They must also demonstrate the capability to handle the vehicle and operate its controls. It is the responsibility of the adult to educate the child and supervise the vehicles use. Read the following safety warnings to any child using the vehicle before riding.

⚠ WARNING!

- This toy was not suitable for Children under 3 years due to its maximum speed.
- To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than 2 riders.
- Protective equipment should be worn. Not to be used in traffic.
- Do not drive the vehicle into loose dirt, mud, sand or fine gravel and Only drive on level ground
- Always wear shoes when using the vehicle.
- Keep your hands, hair and clothes away from moving parts.
- This toy produces flashes that may trigger epilepsy in sensitive individuals.
- A reminder that the toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.

CARE WARNINGS

⚠ WARNING!

- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Do not leave the vehicle in the sun for long periods of time or fading may occur. Store in shade or cover with tarp.
- Do not wash the vehicle with a hose.
- Do not wash the vehicle with soap and water.
- Pay attention while driving the vehicle, avoid falls or collisions causing injury to the user or third parties.
- Please check the component parts before using, and make regularly examine the transformers or battery chargers for in the event of any damage on the cord, plug, enclosure and other parts, the vehicle shall not be used until the damage has been repaired, to avoid an accident.

RE-CHARGE INTERVAL AND TIME
IMPORTANT!









- Damage to the battery may occur if it is allowed to drain completely. Do not allow the battery to drain completely.
- Check the battery and charger (supply cord, connector) for wear and damage before charging. Do not charge the battery if damage has occurred.
- When the charger turns from red light to green light, it means that the battery is full and can be disconnected from the charge.
- Only an adult who has read and understood the safety warnings should handle, charge and recharge the battery.

Specification

Name	specification
Battery	21.6V5AH
Motor	Motor: DC 24V Steering motor: DC 24V
Suitable age	3 years+
Max weight	60kgs
Body size	1120*805*780MM
Speed	3.3-7KM/h
Hours of use	charging 8-12 hours, using 1 to 2 hours
Charger	Input: 100V~240V AC Output: DC 25.2V 800mA-1000mA
Main material	PP(polypropylene) and iron

*The above parameters contain optional features, specific parameters please refer to our samples.

        Parts List

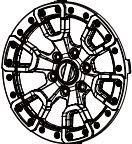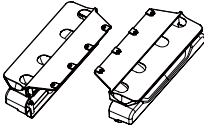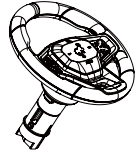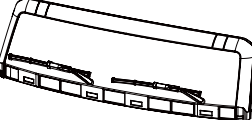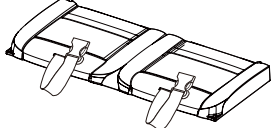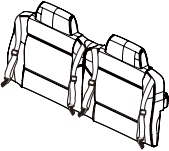NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	2	 A(Allen wrench)	②	1	 B (Rear axle)
③	2	 C(M8 Spanner)	④	4	 D(Wheel)
⑤	4	 E(Wheel Cover)	⑥	1	 F(Front axle)
⑦	1 set	 G(Welcome pedal)	⑧	24	 H(Self-tapping screw)
⑨	1	 I (Steering Wheel)	⑩	1	 J(Wind deflector)
⑪	1	 K(Seat)	⑫	1	 L(Backrest)

⑬	2		⑭	1	
		M(Tail frame)			N(Rear bracket support)
⑮	1		⑯	1	
		P-L(Front left fender)			P-R(Front right fender)
⑰	1		⑱	1	
		Q-L(Rear left fender)			Q-R(Rear right fender)
⑲	1 set		⑳	1	
		R(Rear view mirror)			S(Charger)
㉑	1		㉒	1	
		T(Remote control)			U(Manual)

Installation Steps

Preparation work:

Put the car upside down on a soft cloth or smooth plane firstly (Can't be directly placed on the surface of the cement, etc., which will scratch the surface of the plastic), then take off the cardboard, foam, nylon cable ties.

Tools:



1X

 
(Not Included)

A 2X




(Included)

C 2X

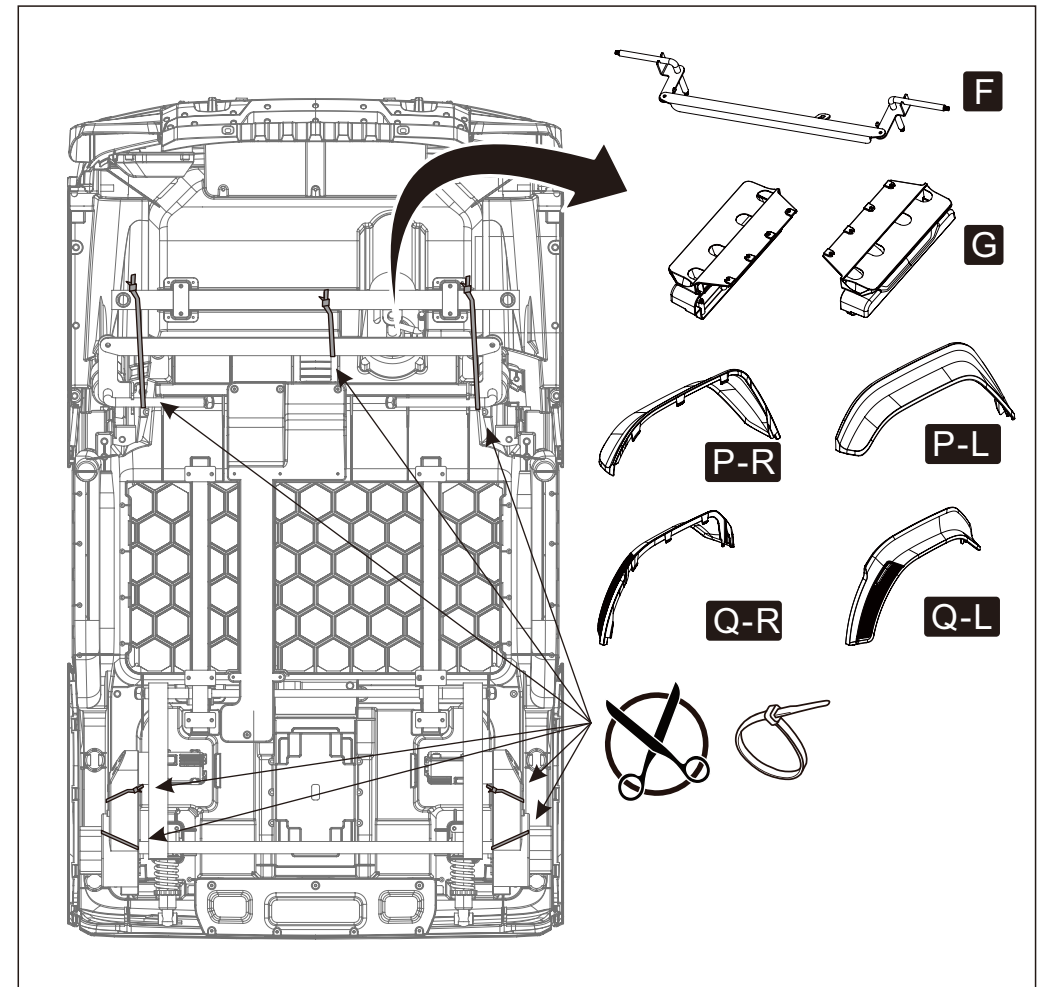


Cut the Zip-Tie

 Cut all the 7 pcs Zip-Tie holding down Frame, and take out the accessories.

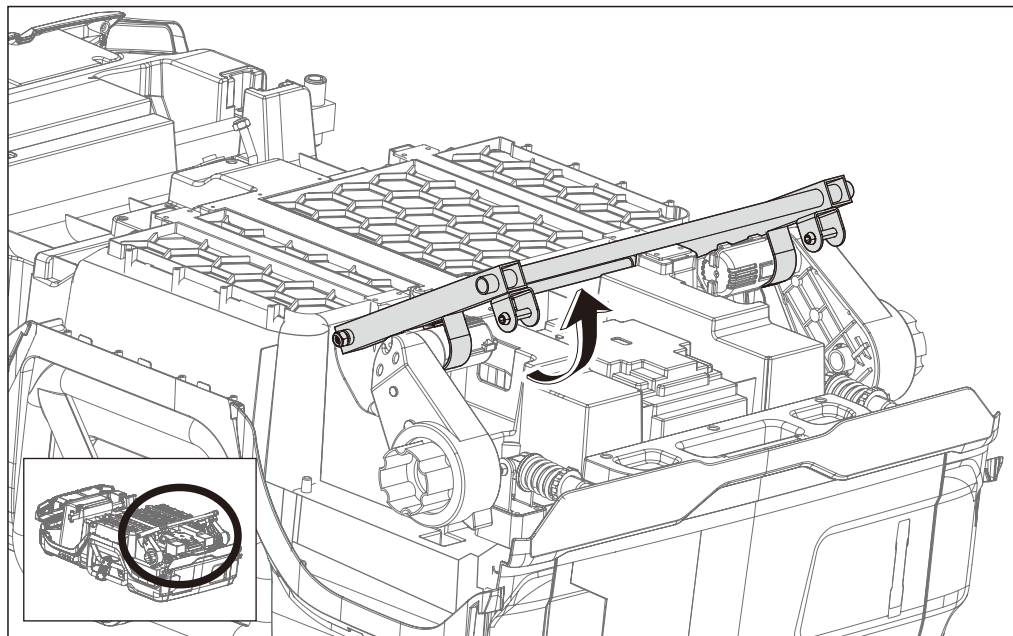

Step1-1: Install rear suspension

 Flip vehicle body over and lay it on a level surface. Lift the rear axle frame as shown in the picture.

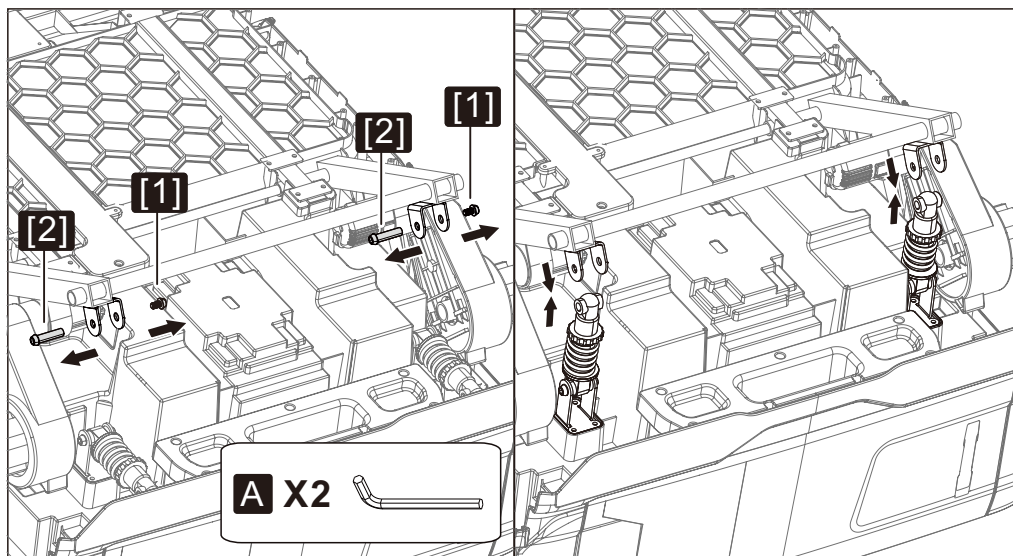


Step1-2: Install rear suspension

Remove the [1] female nail and the [2] male nail with 2 pcs A (Allen wrench).

Step1-3: Install rear suspension

 Lift the shock absorber and align it with the rear wheel bracket.

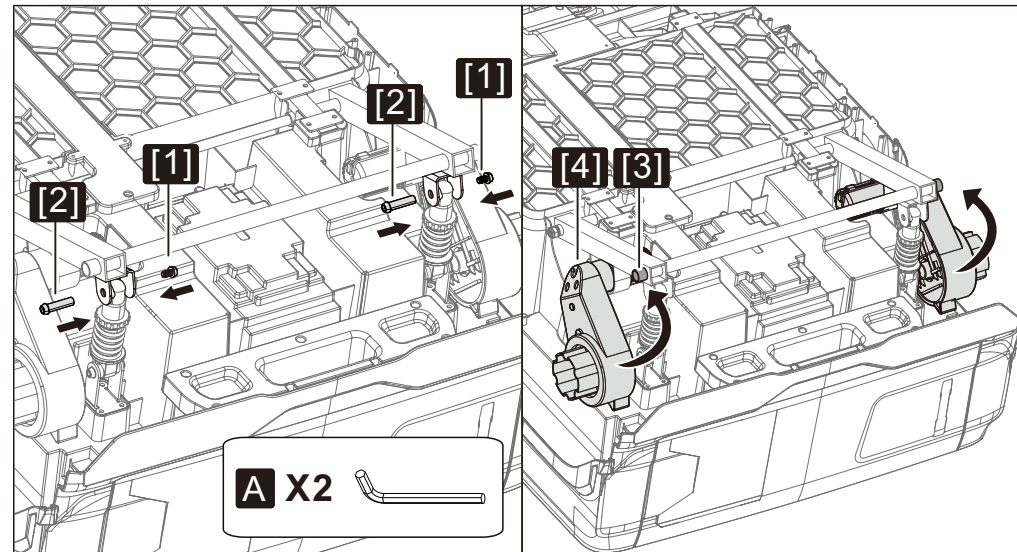


Step1-4: Install rear suspension

用 [1] female nail and the [2] male nail Secure the rear wheel bracket.


Step1-5: Install rear suspension

 Install the motor [4] to the position [3] of the iron frame.

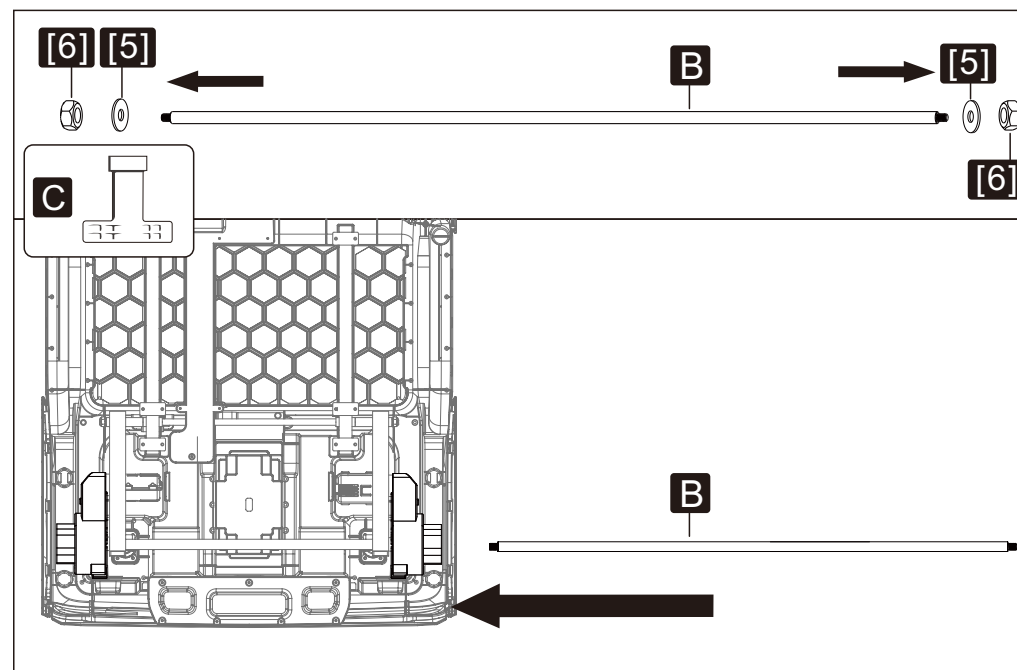


Step 2: Install rear axle

 1. Use C(M8 spanner) to loose the 2 pcs [6](nuts), 2 pcs [5] washer from B (real axle) by counterclockwise rotation.
2. Insert B (real axle) into left motor, right motor, keep the same length at left and right.

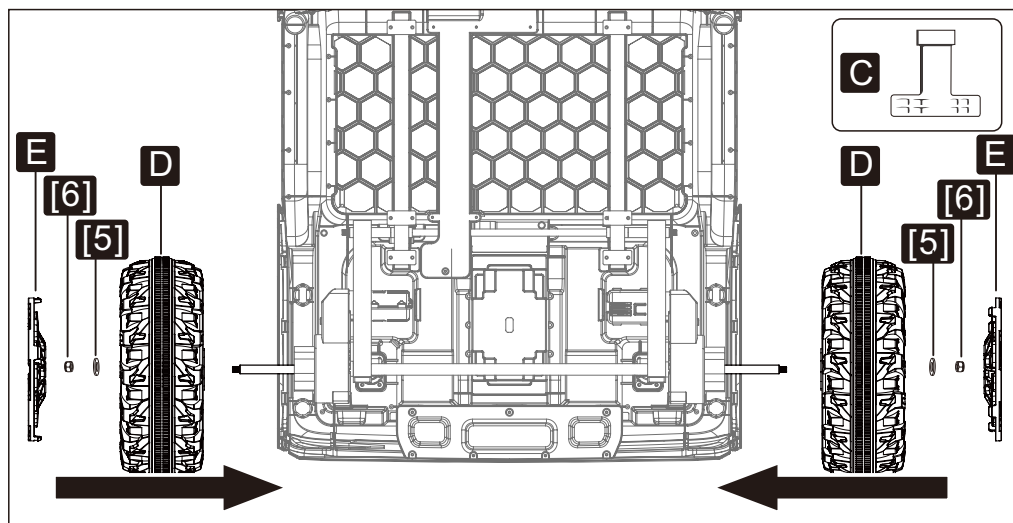


Step 3: Install rear wheels

 Install D(wheel), [5]washer, [6] (nut) into the rear axle. (Note: make sure the right installation direction). Press E(wheel cover) firmly into the corresponding position on D(wheel).

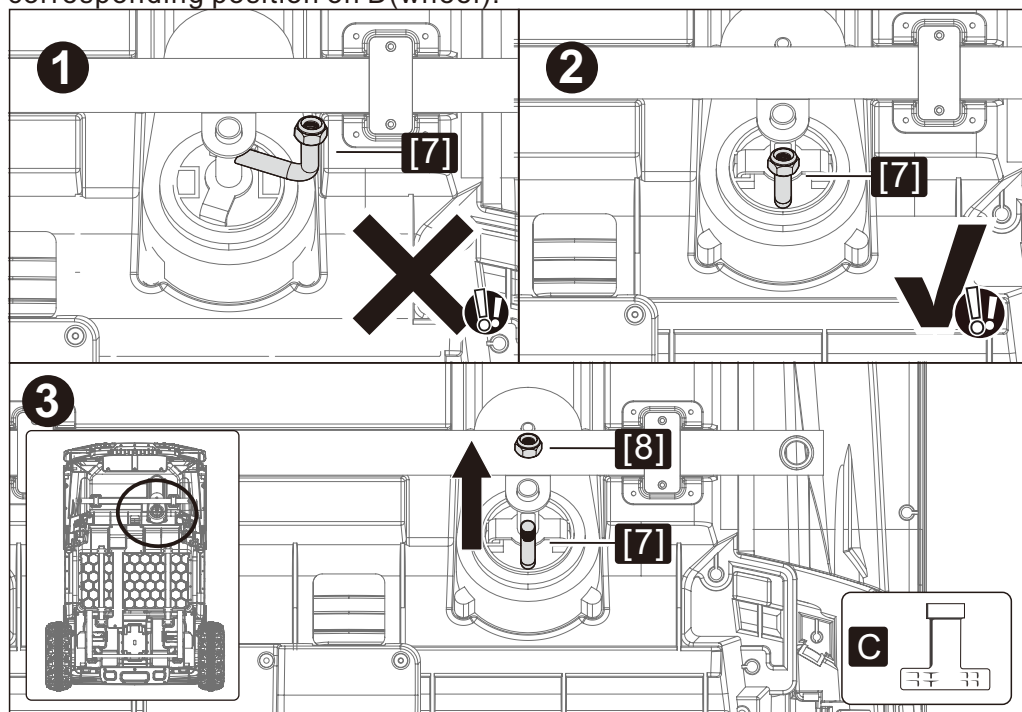


Step 4-1: Install the front axle

 Picture 1 is wrong, the steering yoke [7] needs to be rotated to the correct position in picture 2 before installation
Use C(M8 spanner) to loose the [8]nut from [7](steering yoke) by counterclockwise rotation.

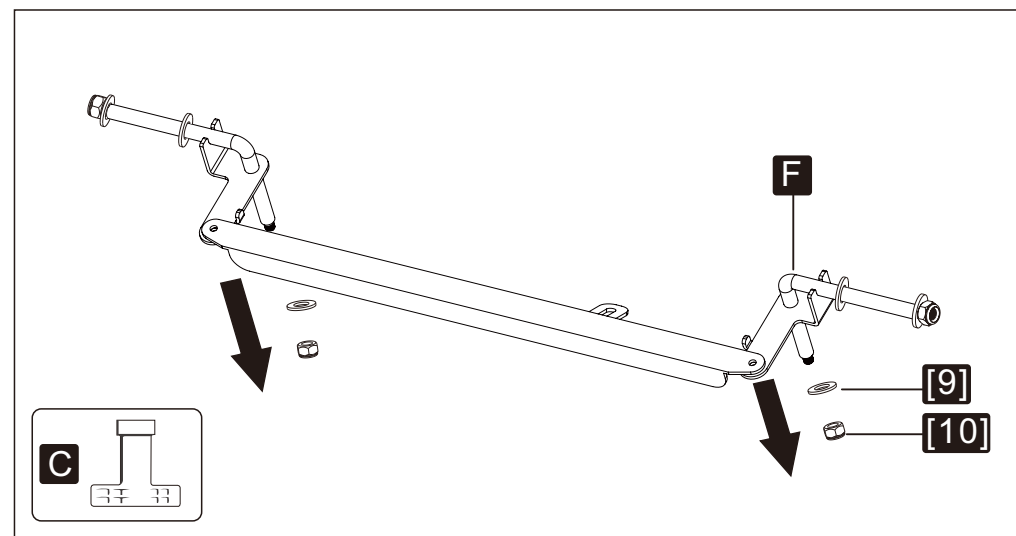


Step 4-2: Install the front axle

 Remove the[9] nuts and [10] washers from the F(front axle).

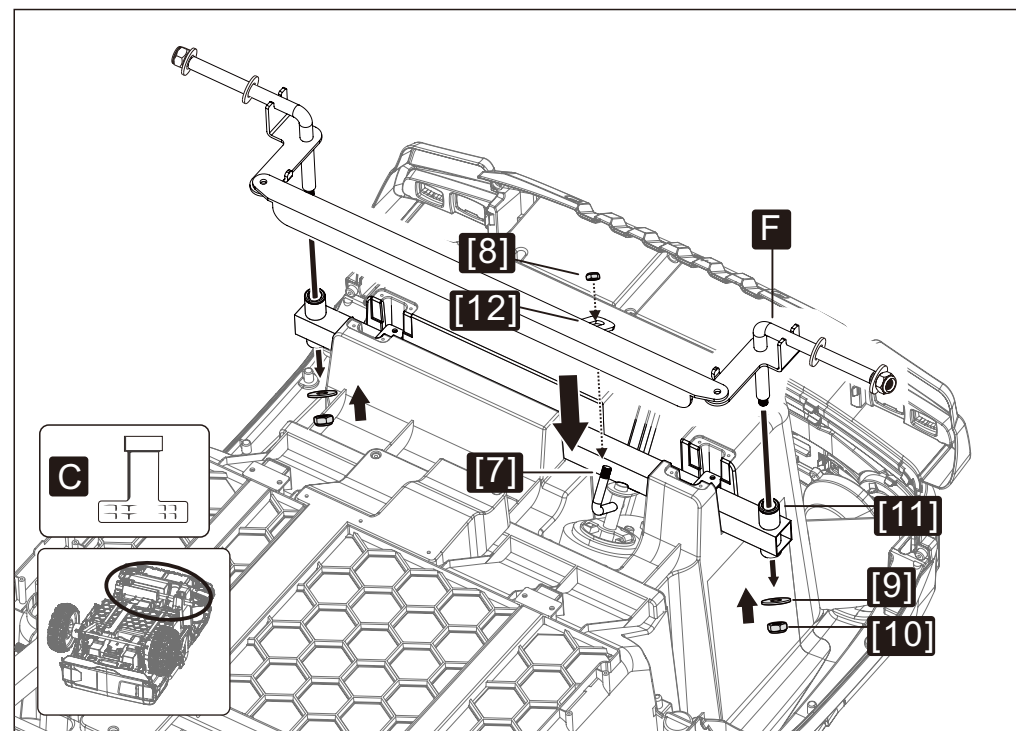


Step 4-3: Install the front axle

 Install F (front wheel assembly) into [11], then install [9] washers and screw on [10]nuts. NOTE: Insert [7] steering axle through the hole [12]. Then install [8] nut on the [7] steering axle.

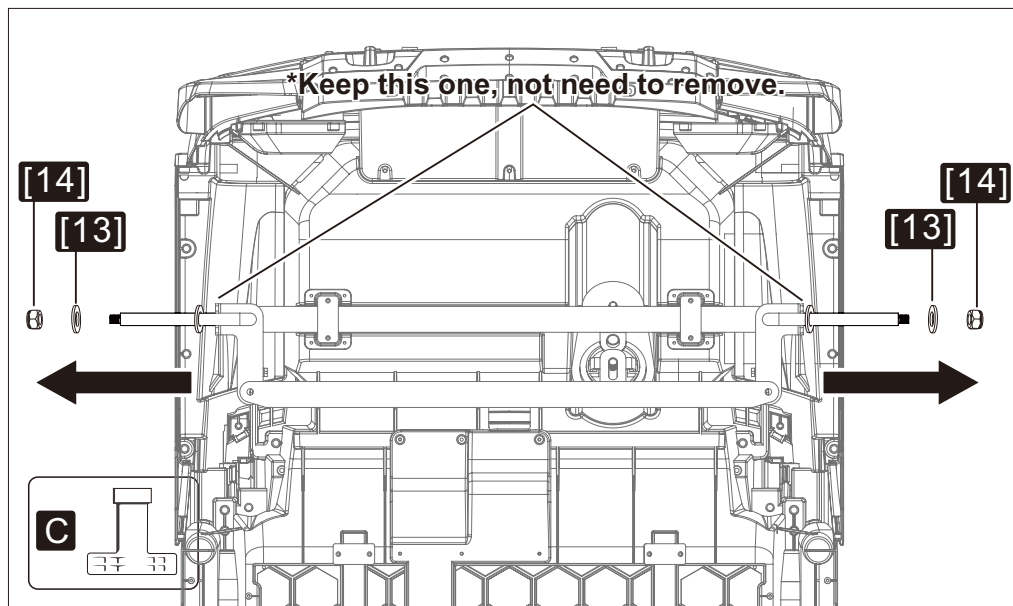


Step 5-1: Install front wheels

 Remove the [14] nuts and [13] washers from the F(front axle).

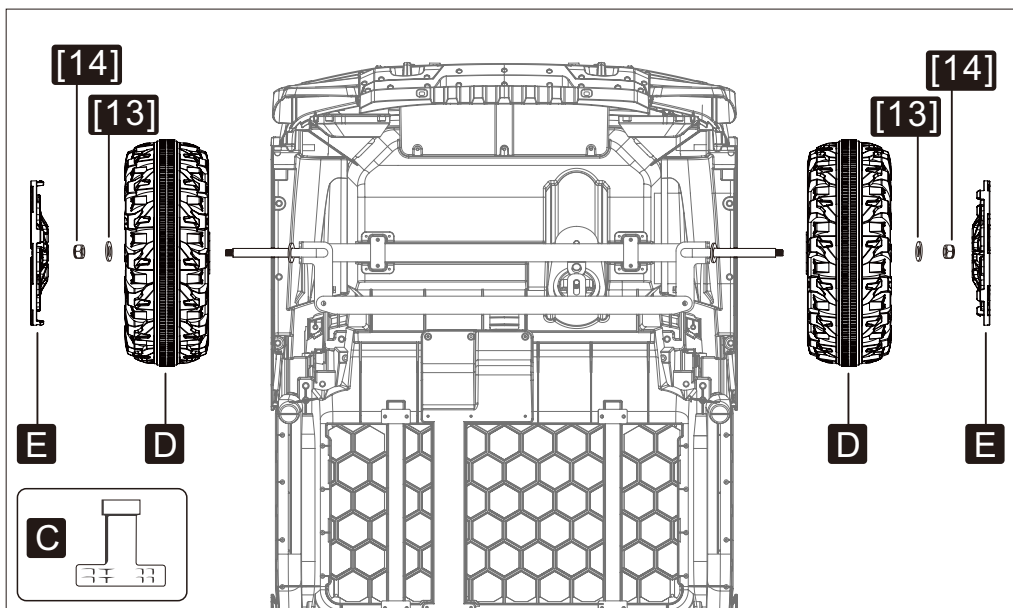


Step 5-2: Install front wheels

 Install D(wheel), [13] ,[14] on the front axle, and Install E(wheel cover) on the D(wheel).

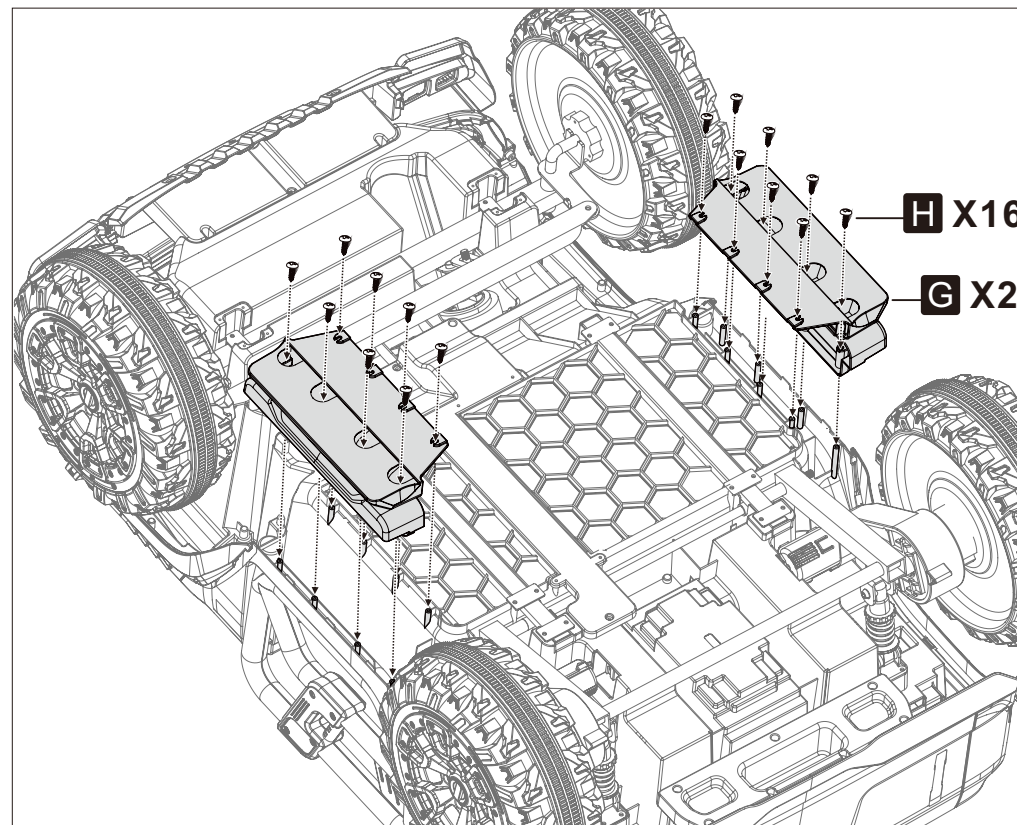

Step 6: Install the welcome pedals

 Install the 2 pcs G (Welcome pedals) to the position shown in the figure. Use 16 pcs H (self-tapping screws) to tighten and fix the pedal.

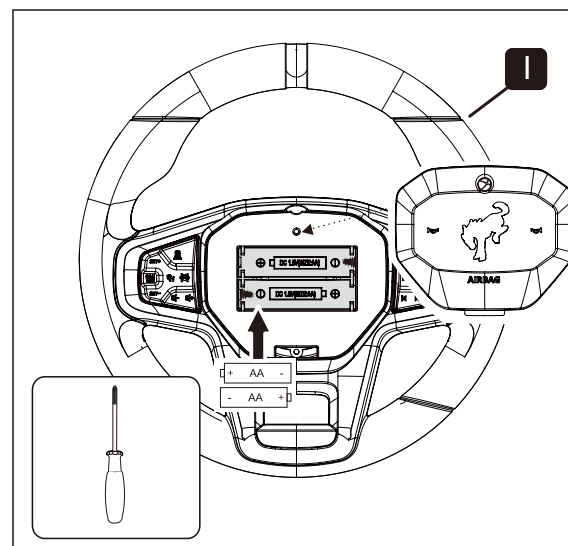


Step 7: Install steering wheel battery

Firstly use a screwdriver to unscrew the I (steering wheel) cover in counterclockwise, then install 2 AA batteries as shown, finally cover the cover and tighten the screws in clockwise.


⚠ WARNING!

 - 1.All batteries should be inserted in the correct polarity.
- 2.Non-rechargeable battery cannot be recharged
- 3.Take out and properly deal with the dead battery. To avoid injury, please keep kids away from the battery.
- 4.The direct contact between the positive and negative terminals may result in fire or explosion. Avoid direct connect between the terminals.
- 5.Do not mix old and new batteries. DO not mix alkaline, standard(carbon-zinc),or rechargeable(nickel-cadmium) batteries.
- 6.Only an adult who has read and understood the safety warnings can recharge the battery.

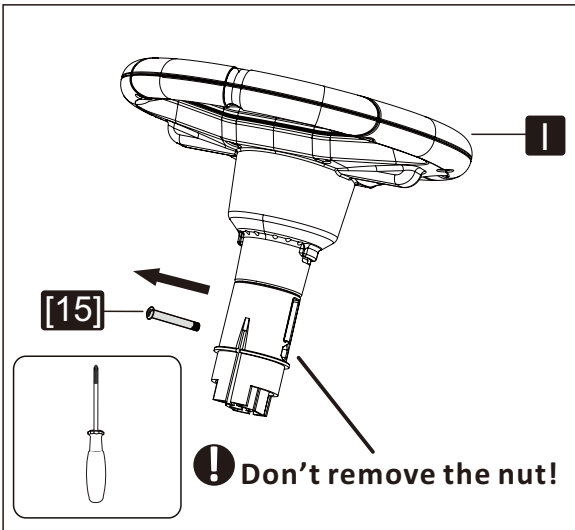


Step 8-1: Install steering wheel

 Remove the [15] screw from the I (steering wheel) firstly.

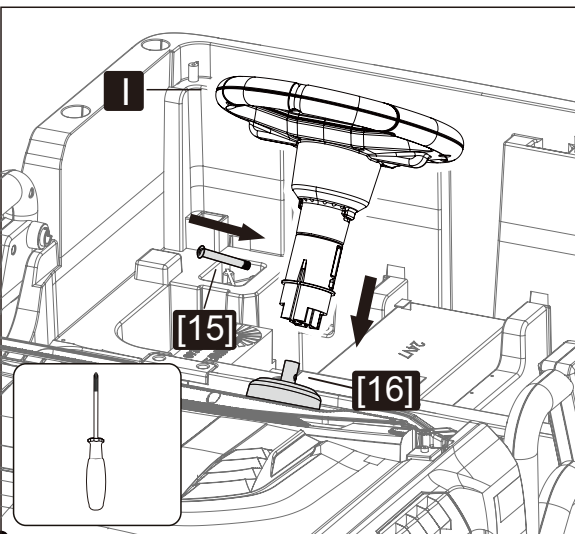


Step 8-2: Install steering wheel

 Take off the nylon cable tie from the I (steering wheel) , Finally insert I (steering wheel) onto [16] (steering yoke) , Then plug the [15] screw in to the steering wheel and tighten it.

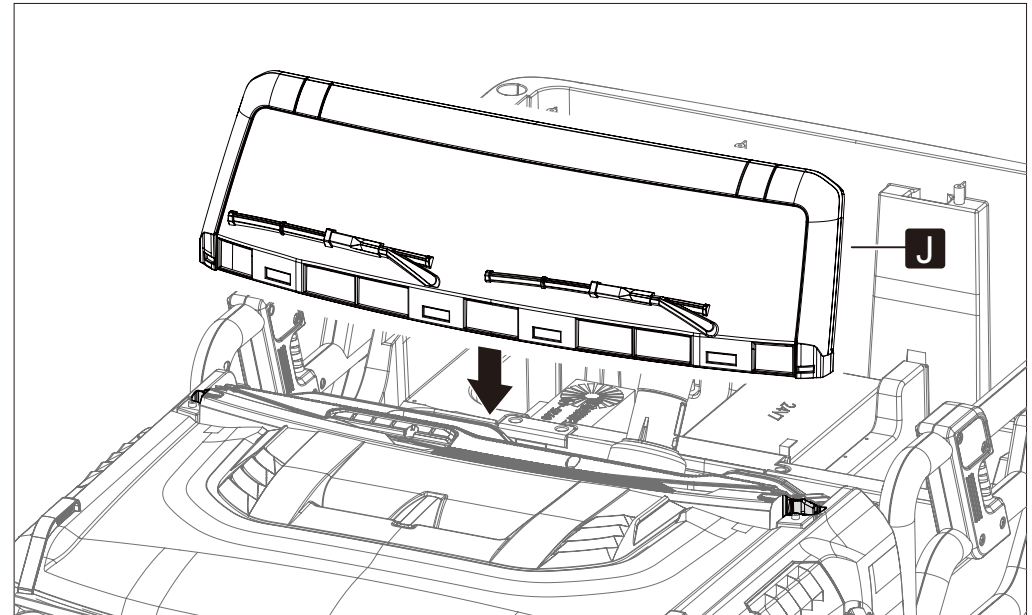


Step 9: Install the wind deflector

 Follow the direction of the arrow as shown in figure, to install J (wind deflector) .

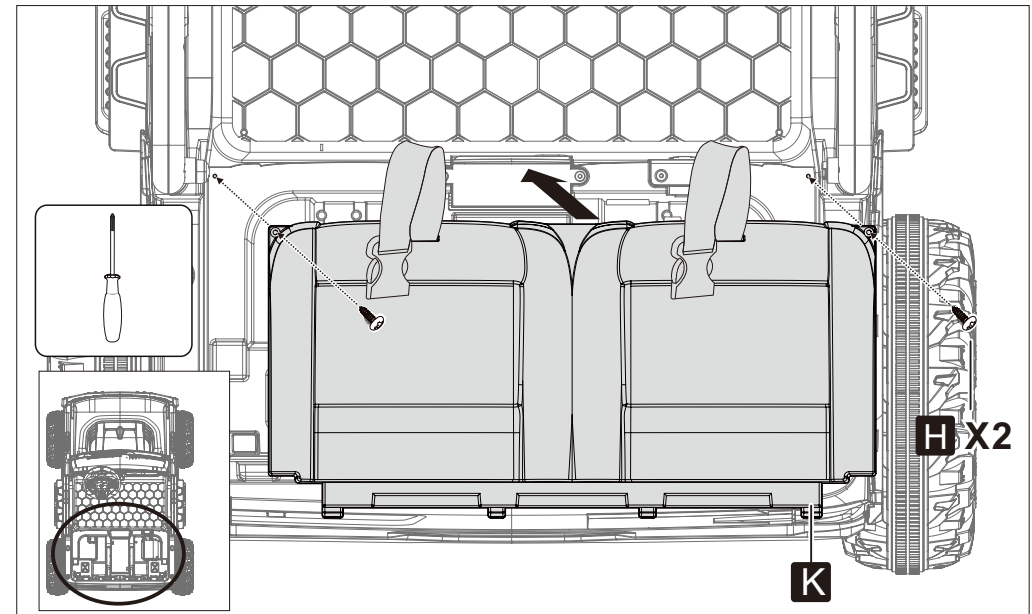


Step 10: Install seat

 Align at the body grooves to install the K(seat) , Use 2 pcs H (self-tapping screws) to fix the seat.

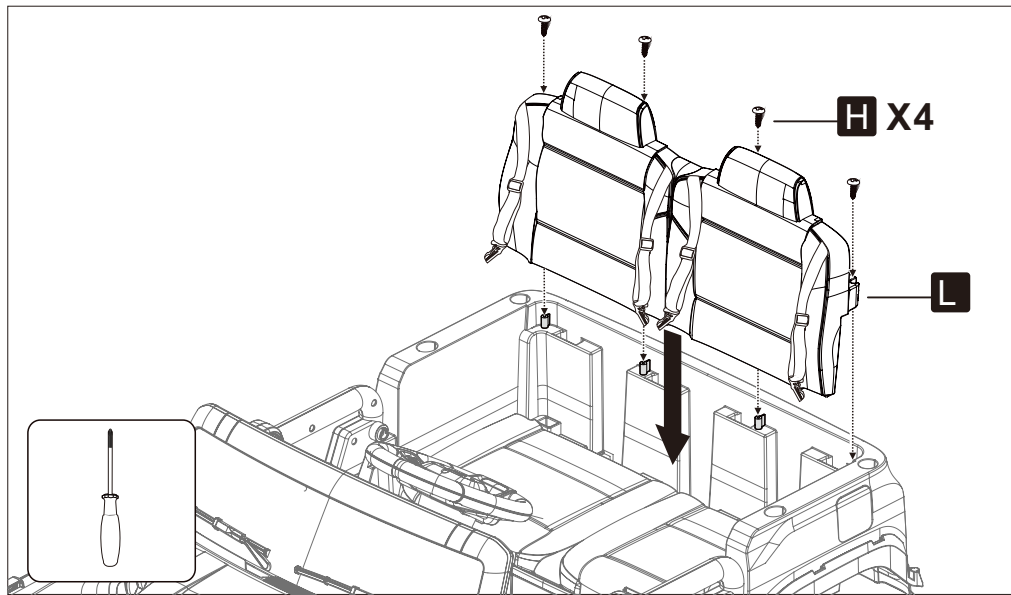


Step 11: Install backrest

 Install the L (backrest) align at the correct position firstly. Use 4 pcs H (self-tapping screws) to fix the backrest.

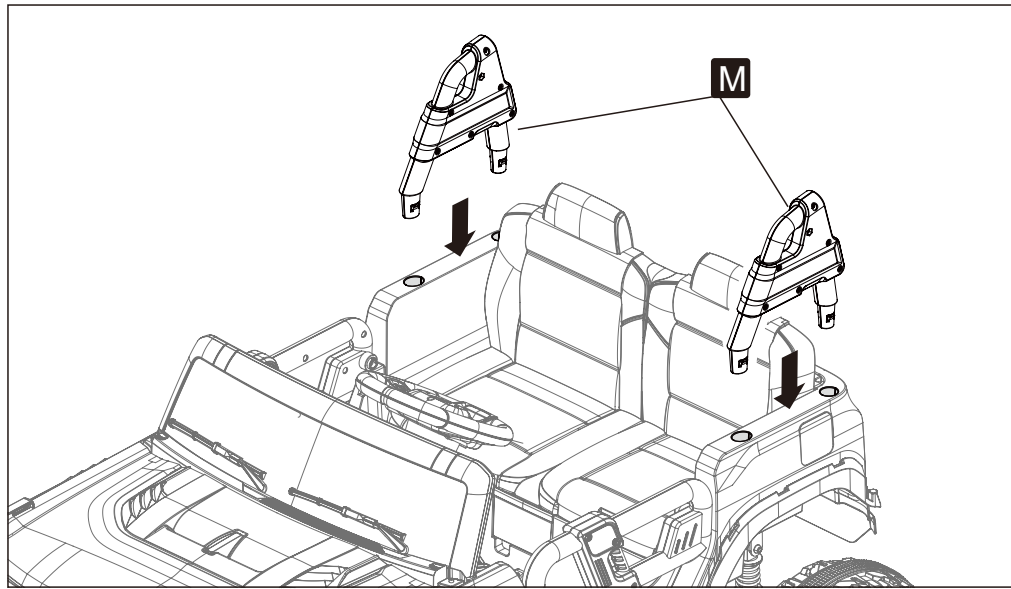


Step 12: Install side tail frame

 Install M(side tail frame) to the car body as show in figure.

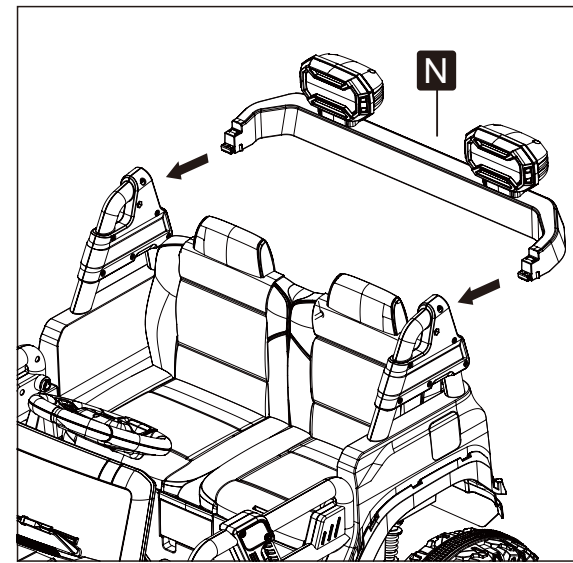


Step 13: Install rear bracket support

 Install rear bracketsupport (N) on the side tail frame (M) as shown in the figure.

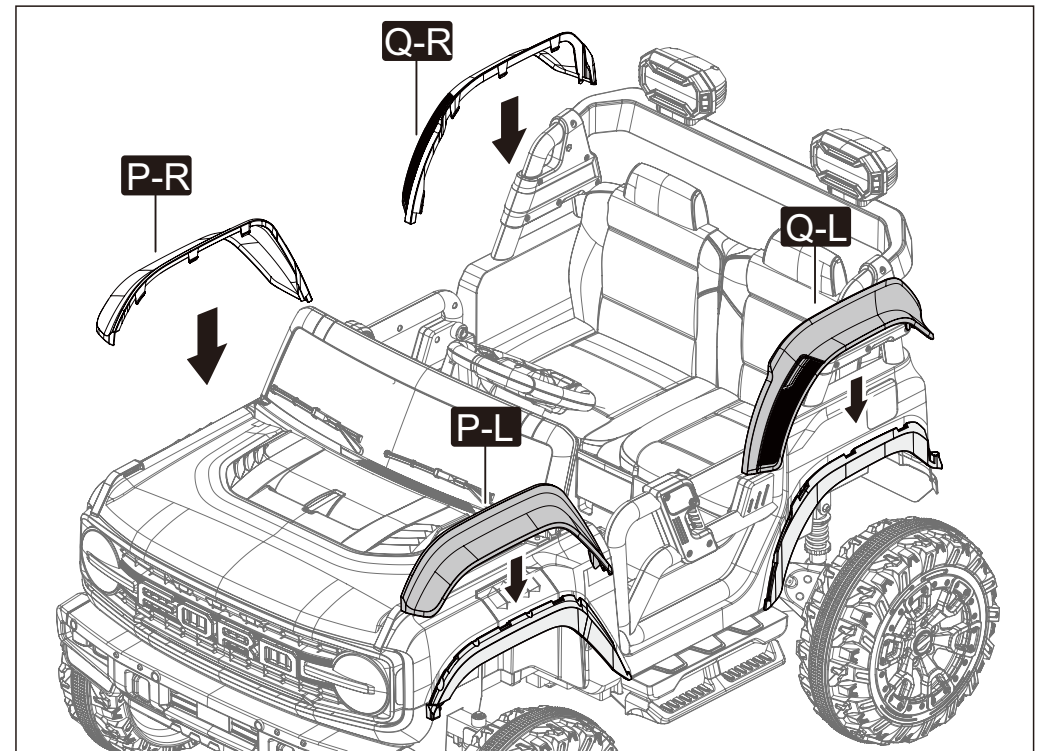

Step 14: Install fender

 Install P-L (front left fender) and Q-L (rear left fender) onto the left side of car body as shown in the figure, Install P-R (front right fender) and Q-R (rear right fender) onto the right side of car body as shown in the figure. Tighten the buckle in turn.

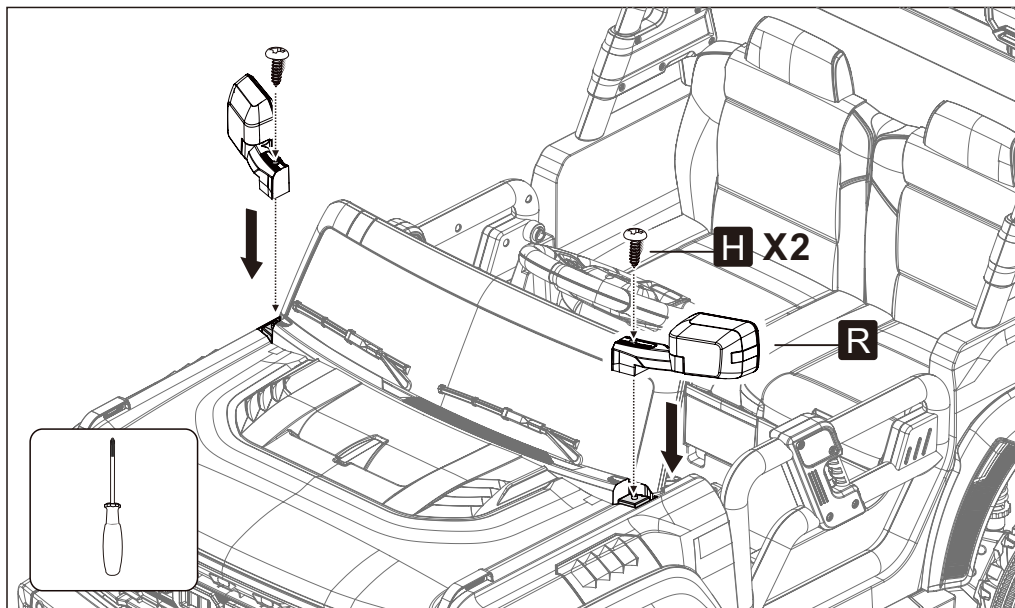


Step 15: Install the rear view mirror

Install the R (rear view mirror) into the corresponding grooves on the according to the direction indicated by the arrow in the figure. Then Fix the R (rear view mirror) with 2 pcs H (self-tapping screws) onto the body.


Direction for use

 1. The installation and replacement of the batteries in the remote control:

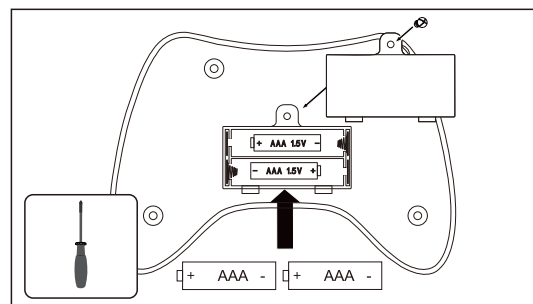

Use a screwdriver to remove the battery cover of the remote control, insert two AAA 1.5V dry batteries in correct polarity. Close the battery cover and fix it with the screw. (Battery replacement also according to the above steps)

 2. Matching the frequency of car and remote control

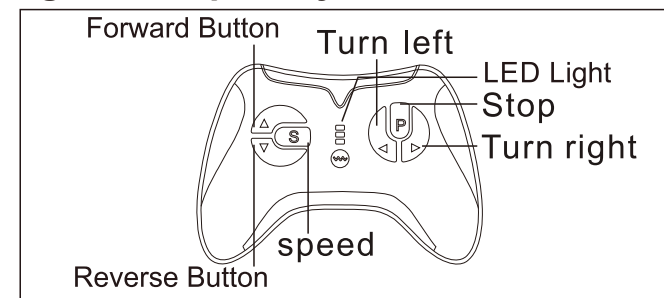

Operation manual: For the first time to use(Or Replace the battery)Need to frequency bind

- Take out the remote control, install the battery
- Long press on the frequency key 2-4 seconds, Low speed LED lights will flash
- Turn on the power of the car, Low speed LED lights will from flash to long lighting, then frequency bind succeed
- If the frequency bind failed(Low speed LED lights flash), remove the battery and repeat steps 1-3
- Remote control without operation after 10 seconds, indication light will off into power saving mode
- Button Description: $\triangle$ forward ∇ backward $\triangleleft$ turn left $\triangleright$ turn right S: Speed

“P” stop button: Press this button, the vehicle will stop immediately and indicator flash, vehicle has no move function either by controller or manual control from the vehicle. Press the button again, indicator change to solid light, vehicle back to operation mode.

Remote control operating instruction

Remote control is priority (when the car is in Remote control, the remote control personnel can control the car forward and backward, high/Low speed, steering and other functions, the driver CAN NOT operate the car).

 
Press the ▲ forward button, the car goes forward. Press ▼ reverse button, the car goes reverse. “P” stop button: Press this button, the vehicle will stop immediately and indicator flash, vehicle has no move function either by controller or manual control from the vehicle. Press the button again, indicator change to solid light, vehicle back to operation mode. Press the turn left button car turn left, Press the turn right button car turn right;(Note:The remote control turning button needs pressing more than once while turning, otherwise it will automatically return to the straight line.)The S button is speed button, one light on is low speed, two lights on for intermediate speed, three lights on for high speed.

⚠ WARNING!

1. All batteries should be inserted in the correct polarity.
2. Non-rechargeable battery cannot be recharged
3. Take out and properly deal with the dead battery. To avoid injury, please keep kids away from the battery.
4. The direct contact between the positive and negative terminals may result in fire or explosion. Avoid direct connect between the terminals.
5. Do not mix old and new batteries. DO not mix alkaline, standard(carbon-zinc),or rechargeable(nickel-cadmium) batteries.
6. Only an adult who has read and understood the safety warnings can recharge the battery.

⚠ WARNING!

The remote control is not a toy. It is for the adult use only, and should not be used by a child. A close adult supervision is always required. Reception range may change significantly with weather, battery, and other environmental conditions.

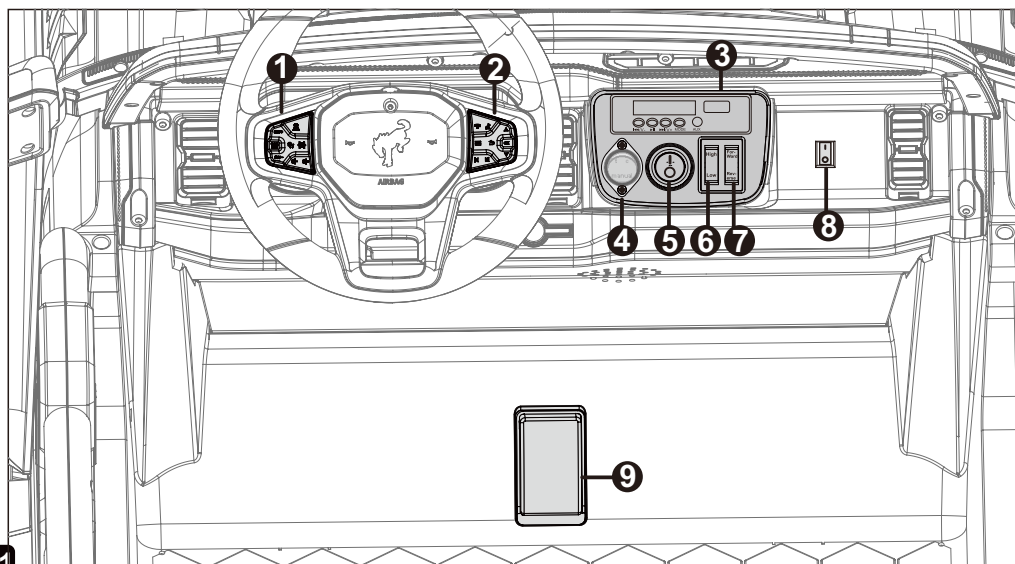

3. Instruction of each switch and function button

- 1&2. Horn Button: Press the button to horn.
3. Mp3 multifunctional player.
4. Remote control / manual control switch: can switch between remote control and manual control.
5. Power switch: “I” is turn on, “O” is turn off the power.
6. High/low speed switch: press the “high” or “low” to adjust the car speed.
7. Forward/Reverse switch: Press the button for controlling the Vehicle to move forward / Reverse.
8. Light switch: “I” is turn on, “O” is turn off.
9. Foot pedal switch: step on the foot pedal switch, the car will move forward, loosen the pedal, the car will stop.

4. Operation guide for Manual control (forward, Reverse):


After the driver is seated, press the power switch. Put the Forward / Backward switch into the position of “forward” (Press forward), step on the foot switch the car will move forward , loosen the pedal the car will stop. Put the Forward/Reverse switch into the position of “Reverse”, step on the foot switch the car will move reverse , loosen the pedal the car will stop.

5. The illustration of High/Low Speed

Power on, Press the high/low speed button in low position, the car go in low speed, step on the foot switch, the car will move forward slowly, release the foot switch, the car will stop. Press the high/low speed button in high position will change to high speed, the car go in high speed, step on the foot switch, the car will move forward fast, release the foot switch, the car will stop.

*** ONLY one speed for reverse, the high/low switch can not control the reverse speed.**

 
6. Instruction for MP3 multifunction player

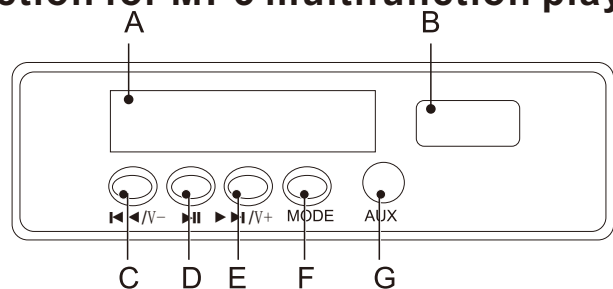


- A. Voltage display screen: The value on the display be used to determine whether the battery needs to be charged.
- B. Adaptor port: Insert flash driver will play the music inside. Only MP3 mode is supported.
- C. ◀/V- button: Last channel/volume down: short press to play the last channel, long press to lower the volume.
- D. || button: Short press this botton is pause. Note: in FM mode, long press this botton will search radio station.
- E. ▶/V+ button, Next channel / Volume up: short press to play the next channel, long press to increase the volume.
- F. Mode switch button: Can switch between different play modes.
- G. AUX connector: connect with other removable device to play audio file valid.
- I. FM function: press the MODE key to enter the FM mode, long press ▶|| to search the channel (it needs around 1 minute), after that it will automatically lock the radio channel, and it has the memory function, the channel info. will not lose even turn off the power. (please repo at this operating steps if you want to research the channel). Short press ▶|| is pause, ▶/V+ will play next channel, ◀/V- will play last channel.

7. Precautions for using seat belts

 
Fasten safety belt

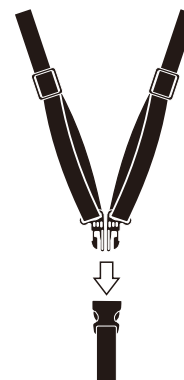


Unfasten the seat belt

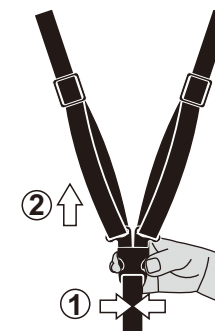 

Adjust the seat belt

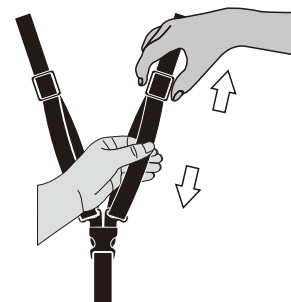 


shorten:

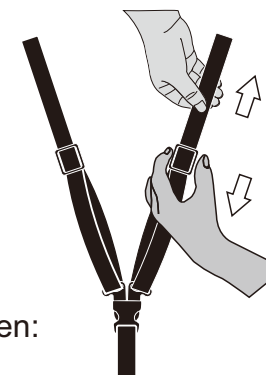 

lengthen:

8. Instructions of the recoverable fuse

 Resettable fuse: when the current exceeds a certain rating, the recoverable fuse will automatically cut off the power supply for 5-60 seconds, then the current will be resupplied.

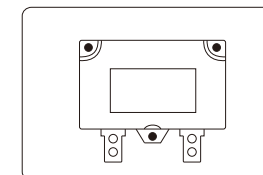

⚠ WARNING

RISK OF FIRE. Do not bypass fuse. This may overload and damage the electrical system. Replace only with original size and type.

9.Charging instructions.

WARNING!
Please plug wall charger directly into a wall outlet. Do not use an extension cord.

When the battery is low, please charge it immediately.1. Please find and open the Charging hole cover as shown in figure. 2. Press the [2] hook to disconnect the power supply terminal. 3. Connect the charger terminal to the power supply terminal. 4. It can be fully charged within 12 hours (note: Charge it for no more than 20 hours). 5. Firstly please unplug the charger plug out of the socket, then Unplug the charger terminal. 6. Connect the power supply terminal, and close the Charging hole cover. (note: this toy cannot be operated, under charging and should be charged by adults)

Troubleshooting

Fault type	Reason analysis	Trouble elimination methods
The motor does not rotate	1. Is the fuse overloaded? 2. The pedal switch connector is good? 3. The welding of motor electric terminal is good? 4. The connector of the motor wire is good. 5. Remove the motor's plug-in, change to connect battery directly, then check if it rotate or not.	1. Yes, the fuse cuts off the power automatically by 5-60 seconds, then restart; No, check next reason analysis 2. No, repair foot switch ; Yes, check next reason analysis 3. No, weld the terminal wire ; Yes, check next reason analysis 4. No, plug in the plug-in ; Yes, check next reason analysis 5. Still no rotation, change the motor; If rotates, it means driving circuit board needs professional maintenance, please contact with agent
Only move frontwards, or only move backwards	1. Check the frontward/backward switch, check the connector is good or not by multimeter 2. Check the drive line cycle of frontward/bckwards is workable or not?	1. No, replace the control board ; Yes, check next reason analysis 2. No, connect the line; Yes, it means driving circuit board needs professional maintenance, please contact with agent
slow speed	1. Check the battery voltage is ok or not. 2. Connect the motor (including the driving gearbox) to the battery, then check the speed can be accelerated or not.	1. No, charger the battery ; Yes it's ok, check next reason analysis 2. No, check next reason analysis ; Yes, it means driving circuit board needs professional maintenance, please contact with agent
The battery can not be recharged	1. The battery connector fall off or loosened. 2. The charger has a slight heat when it is charged	1. Yes, reconnect it, No, check next reason analysis 2. No, the charger is broken, replace it
When car is moving, the sound and light are useless	1. check the sound/light switch is ok or not. 2. check the electric wire connection (from battery to headstock) is good or not?	1. No, replace the control board ; Yes, check next reason analysis 2. No, reconnect; Yes, check next reason analysis
When wheel running, the car does not move	1. check the driving wheel can be rotated or not? 2. Check the gearbox, if any gear is damaged?	1. Yes, lay the wheel to the ground; No, checks the next reason analysis 2. Yes, replace the gear box; No, checks the next reason analysis
Car is unstable, moving on and off	1. Does the driver exceed the maximum load weight? 2. Does the driver ride on the rugged road? 3. Check the wheel can rotate freely?	1. Yes, should follow the instruction, the car unsuitable for exceed maxweight; No, check the next reason analysis 2. Yes, should follow the instruction, ride on the flat cement road ; No, check the next reason analysis No, Troubleshooting wheel and axle